




# Morris Gondola Assembly Instructions

## Step 1

Insert the base leg into the bottom of upright.

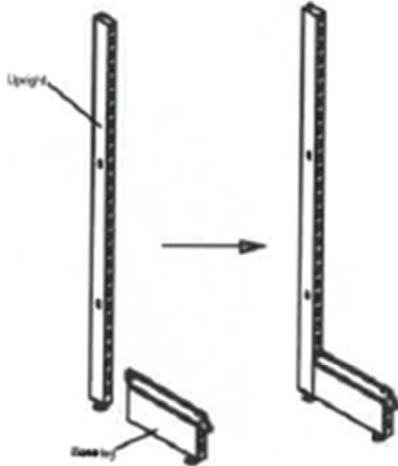

### Base Parts

00015 (2 boxes) Floor Gondola

00020 Wall Panel

### Accessories

00021 2 Shelves / Divider Fences


00042 6" Peg Hooks

00046 4" x 11" Yellow Bins

---


## Step 2

Assemble the back panel onto the uprights one by one from the bottom to the top.

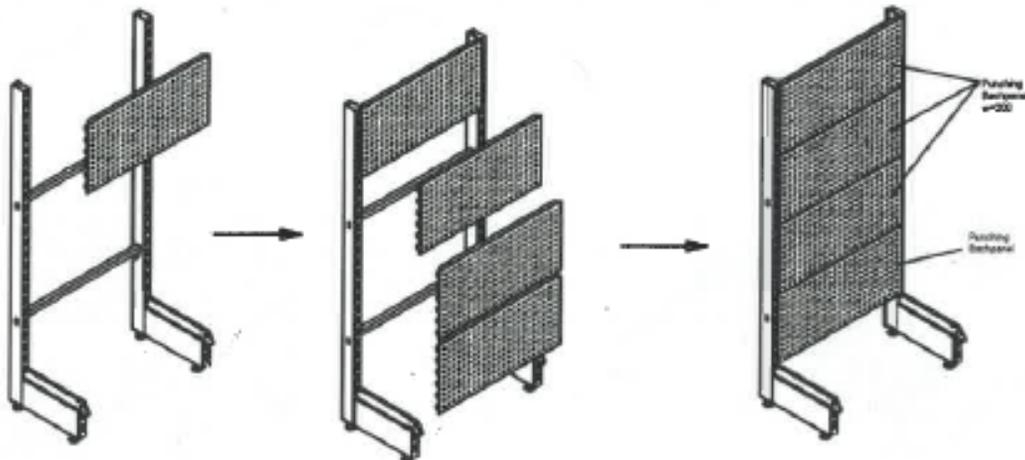

### Step 3


Connect the support bars to two posts with screws provided.

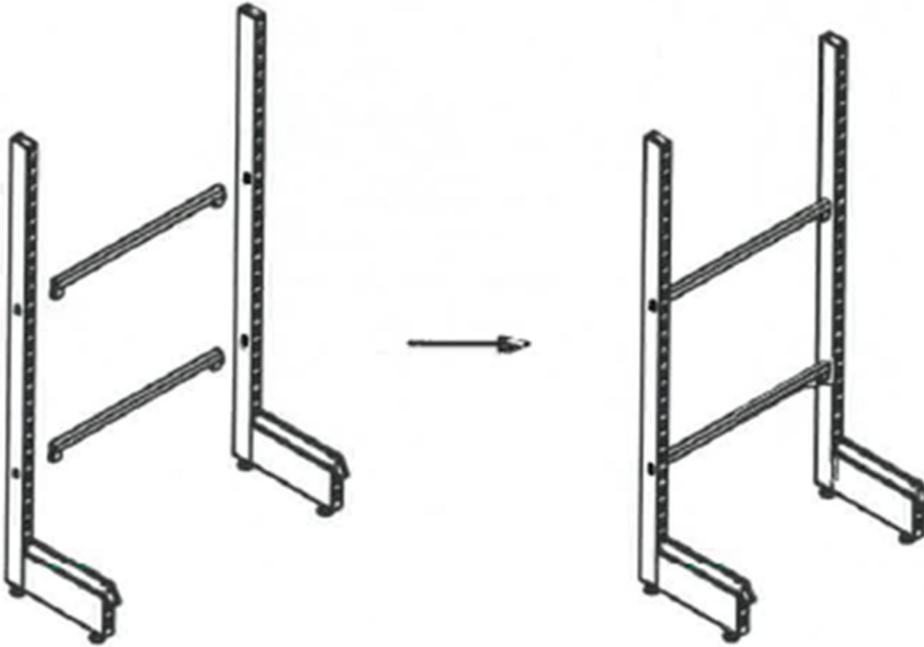

---


### Step 4

Assemble the kick board onto the front of the base legs.

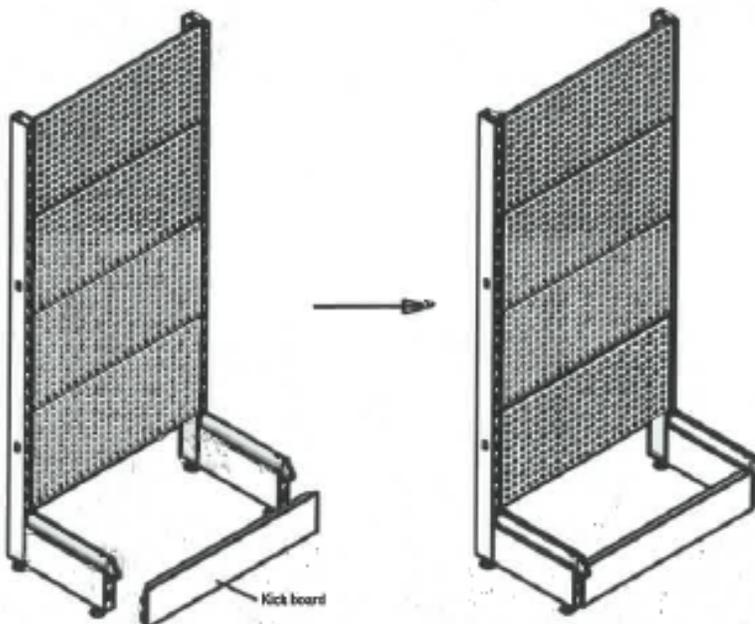

## Step 5


Install the base shelf on the base legs and kickplate

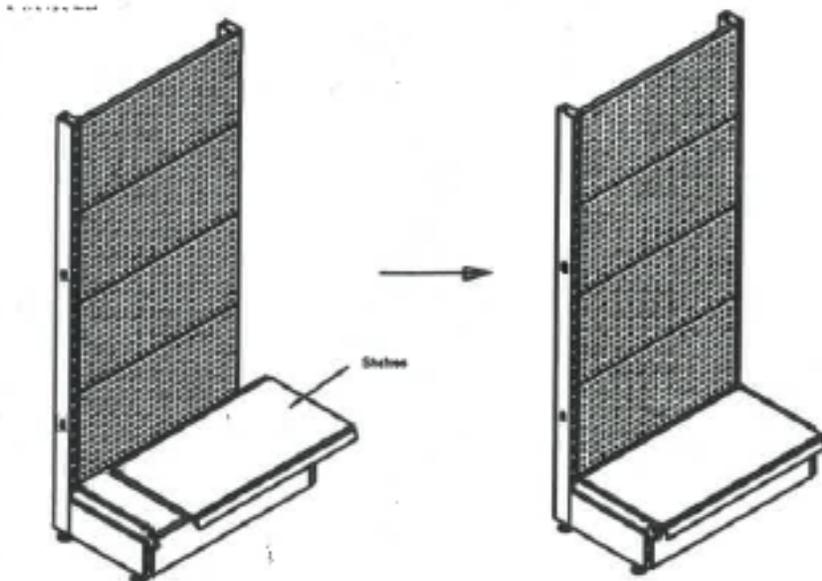

---


## Step 6

Hang the brackets in the slots of uprights and make sure the two brackets are horizontal/level with each other (determine spacing prior to installing brackets). Then install the shelf on the brackets.

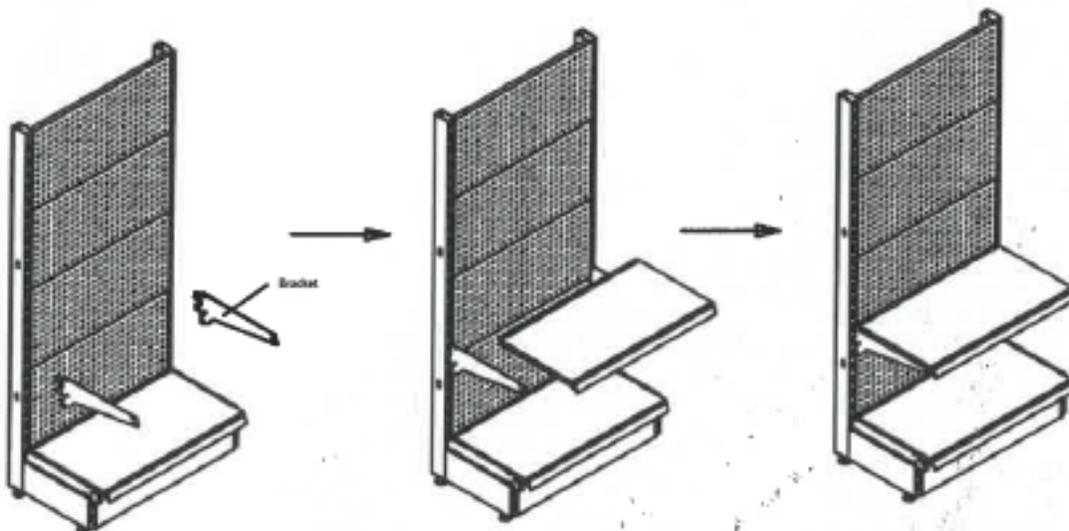

## Step 7

Install the fencing into the slots on the shelf as needed.

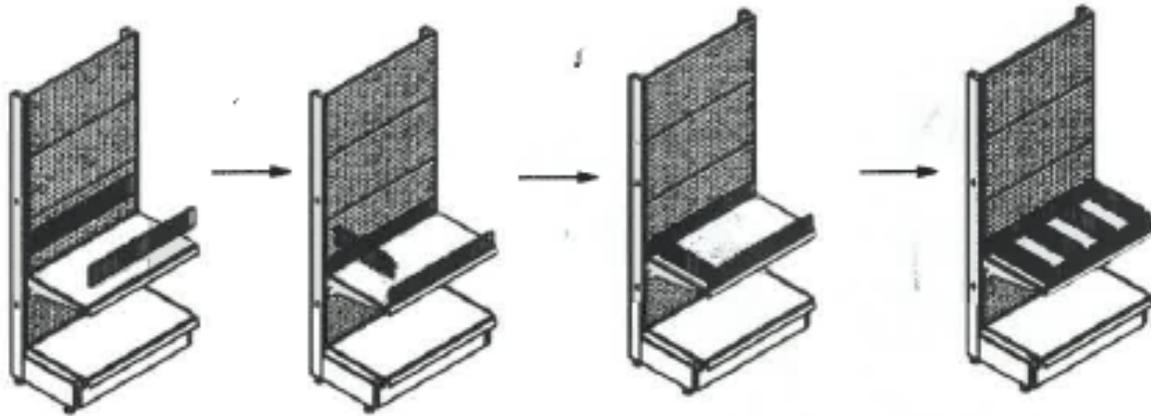

---

## Step 8

Insert the header frame into the top of uprights.

Then insert the acrylic header into the slots of the header.

